




PS - PE BIRDSCREEN ASSEMBLY AND INSTALLATION INSTRUCTIONS


WHEN A BIRDSCREEN IS PROVIDED, IT IS SHIPPED AS A PACKAGE OF FOUR (4) GUARD PIECES WITH THE NECESSARY FASTENERS FOR ASSEMBLY AND INSTALLATION. FOR SHIPMENT, THE PACKAGED BIRDSCREEN IS PLACED IN THE BASE OF THE UNIT. THE PIECES FORM A FOUR-SIDED BOX WHICH IS ATTACHED TO THE FAN BASE. IT SHOULD BE INSTALLED AFTER THE HOOD SUPPORT ANGLES ARE MOUNTED TO THE BASE, BUT BEFORE THE HOOD IS ATTACHED.

Required Equipment and Parts


- (24) - 6" Cable Ties
- (2) Rectangular bird screens (FIGURE 1)
- (2) Peaked bird screens (FIGURE 2)

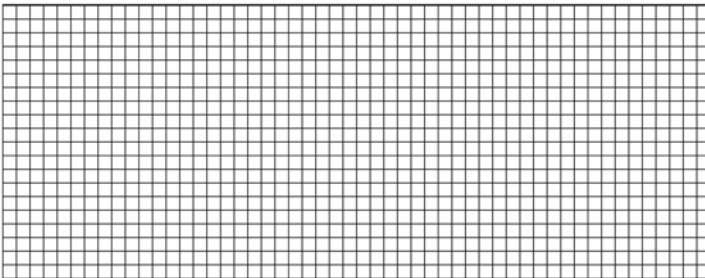


**FIGURE 1 - RECTANGULAR BIRD
SCREEN**

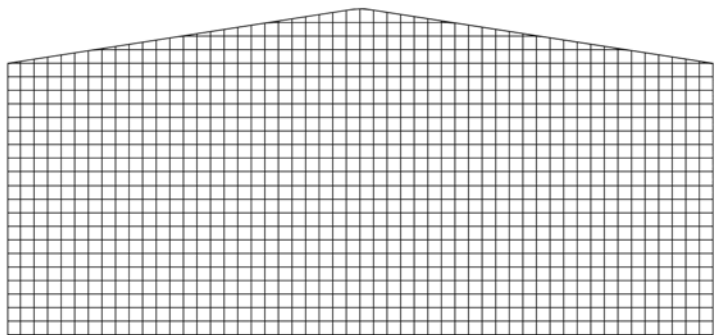

**FIGURE 2 - PEAKED BIRD
SCREEN**

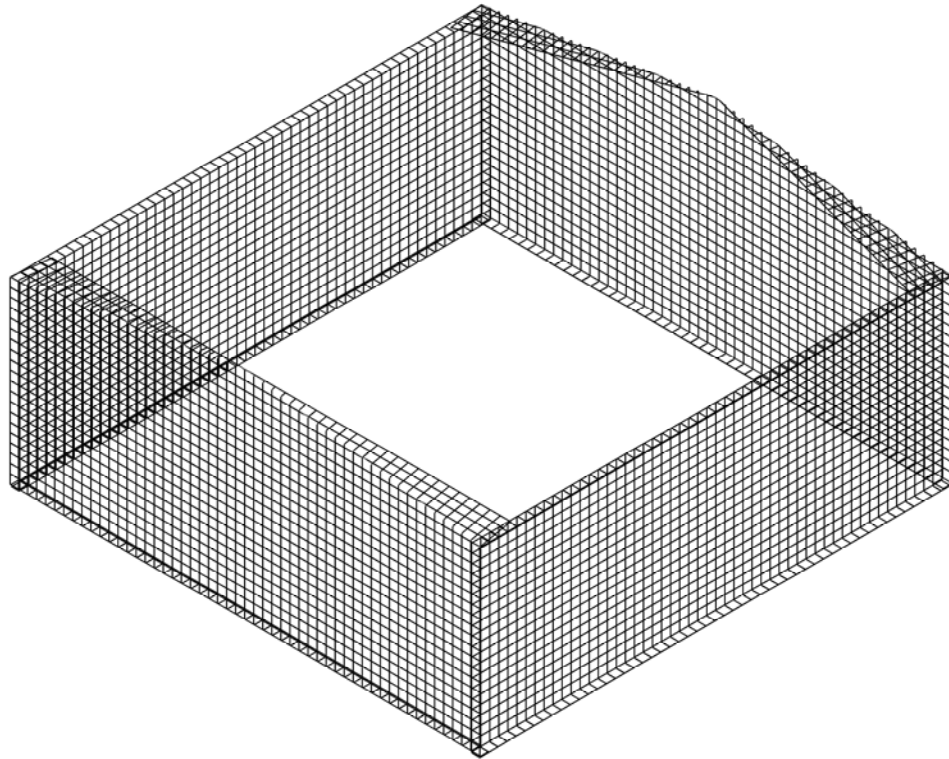

- The bird screen is assembled as shown above.
- The bends in the peaked bird screens point inward.
- The bends in the rectangular bird screens point outward.

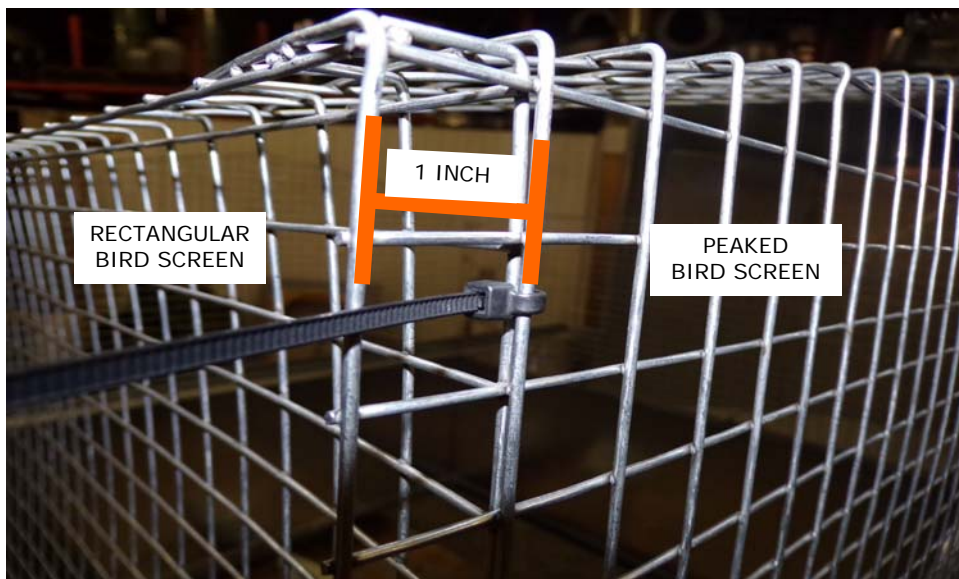

Use (4) cable ties to attach the rectangular bird screen to the peaked bird screen 1" from the edge.


Repeat this for each remaining corner.



Place assembled bird screen on hood support angles, such that the rectangular bird screens are parallel to the hood support angles.



Attach the assembled bird screen to the hood support angles on both sides of the hood base using the (4) attachment holes circled.

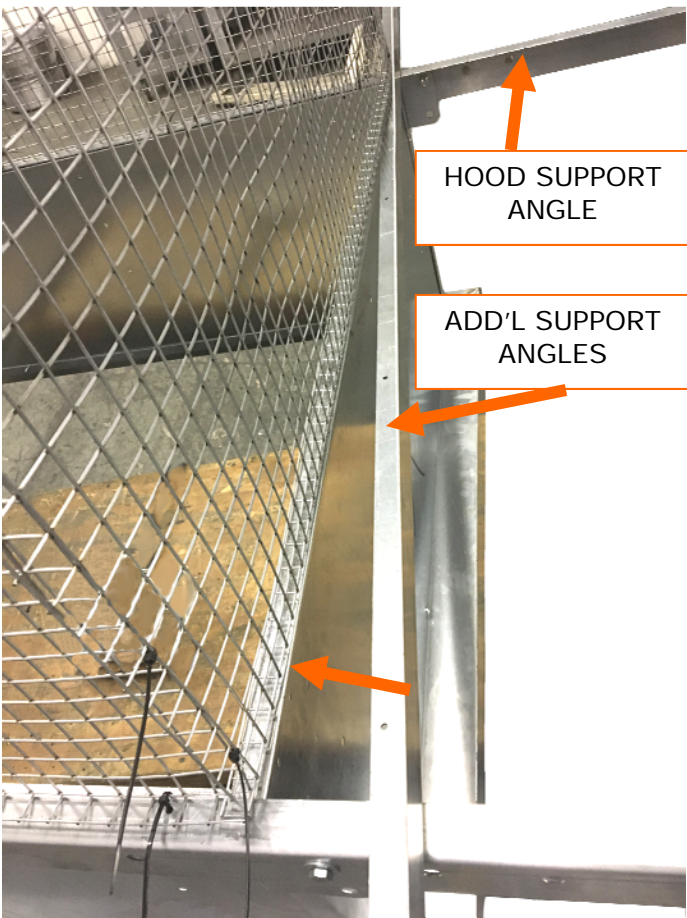

If fan is equipped with additional support angles, place these across the hood support angles and seat them underneath the bird screen assembly.



Finalize assembly by placing the hood atop the bird screen and hood support angles according to the installation instructions included with the fan.

NOTE: Be sure to align the peaks of the hood with the peaks of the bird screen assembly.

When inspecting the fan, two of four 3/8" bolts that attach the hood support angles to the fan base can be removed to tilt the hood assembly.

BE SURE TO SUPPORT TILTED HOOD.