




# MNBF60 Shutter Assembly Instructions

These instructions serve to assist the end-user to install the LRW66 Shutter onto an American Coolair SWH60 fan assembly.

This kit includes (1) shutter, (3) shutter mounting clips, (1) shutter mounting angle, (1) mounting angle shim, and (11) 1/4" lag screws.

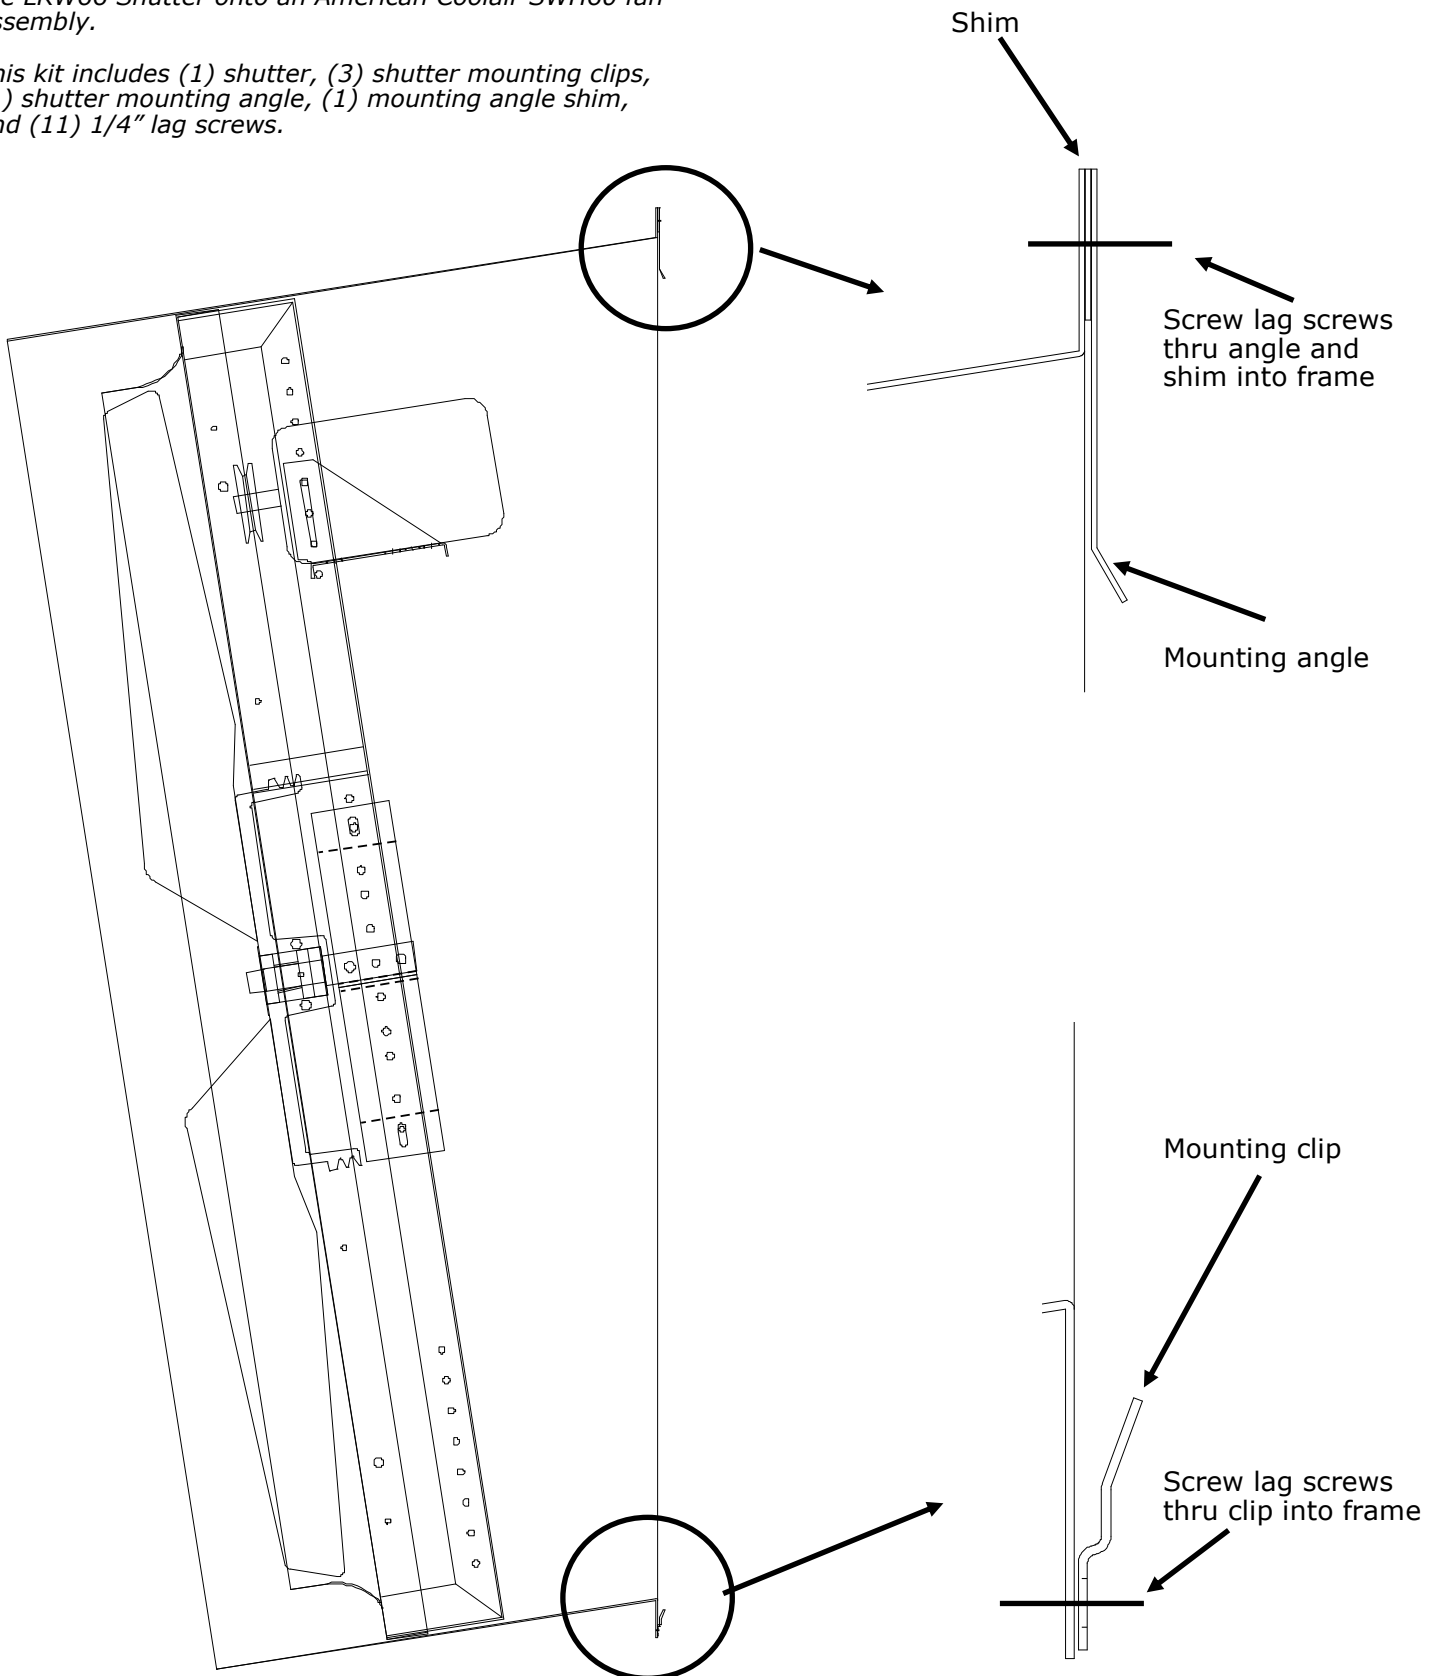



# MNBF60 Shutter Assembly Instructions

*These instructions serve to assist the end-user to install the LRW66 Shutter onto an American Coolair SWH60 fan assembly.*

*This kit includes (1) shutter, (3) shutter mounting clips, (1) shutter mounting angle, (1) mounting angle shim, and (11) 1/4" lag screws.*

## **Install the LRW Shutter:**

Angle the shutter such that the top inserts into the upper mounting angle.

Once the shutter is behind the angle, straighten it, lift upward, and lower the bottom of the shutter frame into the mounting clips.

